


DRAWING NO.

Installation

1. Attach suction diffuser outlet directly to pump inlet following standard piping practices.
2. Using the supporting pad on the diffuser body, properly support the suction diffuser to prevent strain on the pump case.
3. Attach the inlet piping to the inlet of the suction diffuser following standard piping practices.

Maintenance

1. Isolate pump suction diffuser.
2. Relieve any pressure and drain unit.
3. Remove the cover and pull out screen to clean.
4. Care should be taken in cleaning screens by soaking the screen in a cleaning solution (mesh) or cleaned by using a brush (perf).

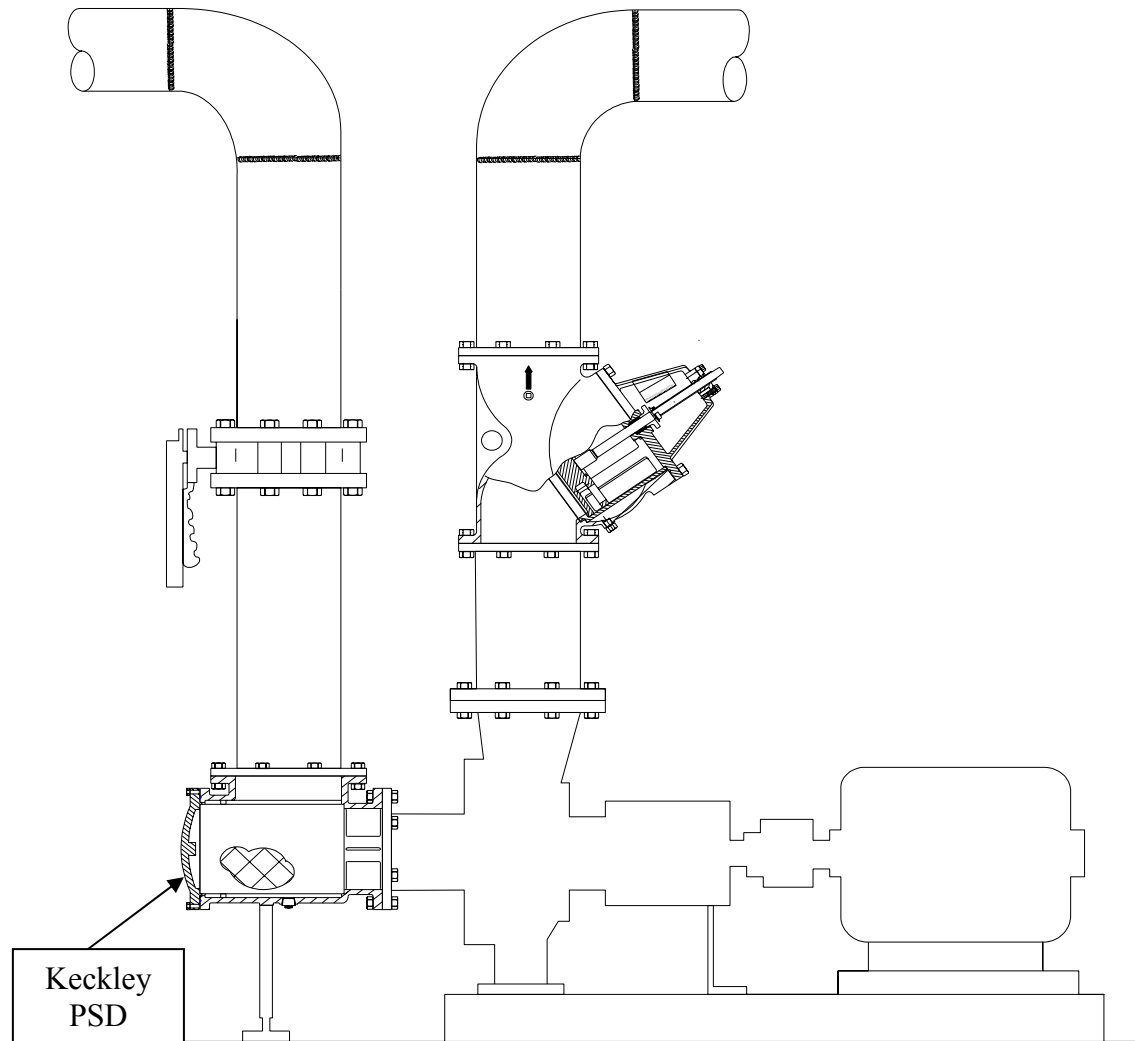

KECKLEY

3400 CLEVELAND SKOKIE ILLINOIS

DRAWING NO.

DIMENSIONAL ASSEMBLY

PART NO.

Typical Installation for PSD

SCALE: NTS

Pump Suction Diffuser

DATE:

MAT'L:

REQ. ---

DR. BY